VIORE™ TECHNOLOGY & INNOVATION

OPERATING INSTRUCTIONS

32" Internet-Connected 1080p LCD Television

LC32VF60CN

AIR (TV)/CABLE MODE SELECTION

The Air/CABLE menu option is set to the “CABLE” (Cable Television) mode at the factory. If you want to use an antenna for the built-in TV tuner, this menu option must be set to the “Air” mode. Please refer to page 14 of the owner’s manual for the details of this menu.

STOP

FOR QUESTIONS OR TECHNICAL SUPPORT
Please call:
1-877-777-1428 (USA / PUERTO RICO)
1-877-777-1429 (CANADA)
Please do not return this TV to the store.

Ver. 110616-1

Contents

Caution	**2**
Safety Information	**3**
Unit and Accessories	**4**
Product Feature	**4**
Introduction	**5-9**
1. Front View	5
2. Rear View	6
3. Instruction for Wall Mount	7
4. Remote Control	8-9
Basic Operation	**10**
OSD Menu	**11-17**
1. Picture menu	11
2. Sound menu	12
3. Entertainment menu	13
4. Channels menu	14-15
5. Lock menu	16-17
6. Setup menu	18-19
7. Software Upgrade	20-21
8. USB menu	22
Simple Troubleshooting	**23**
Technical Specifications	**24**
VIORE Limited Warranty	**25**

Caution

The lightening flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

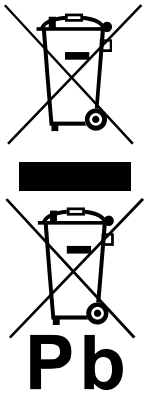

Correct disposal of this Product
(Waste Electrical & Electronic Equipment (WEEE)
Your product is designed and manufactured with high quality materials and components which can be recycled and reused.
This symbol means that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste.
Please dispose of this equipment at your local community waste collection/ recycling centre.
In the USA there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

This unit complies with America Safety directives.

Intertek
3124140
CONFORMS TO UL STD. 60065

This unit complies with FCC directives.

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

Electrical safety

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
  -Do not place any connecting wires where they may be stepped on or tripped over.
  -Do not place heavy items on the leads, which may damage them.
  -Hold the Mains plug, not the wires, when removing from a socket.
  -During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.
  -Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.

- Pull the plug out immediately, and seek professional help if:
  -the mains plug or cable is damaged
  -liquid is spilt onto the set, or if it is accidentally exposed to water or moisture
  -anything accidentally penetrates the ventilation slots
  -the set does not work normally.
  -Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel only are permitted to service this apparatus.
  -To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for along period.
  -Do NOT break open or throw exhausted batteries on a fire.

Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around the unit.
- Do NOT tap or shake the TV screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.

Unit and Accessories

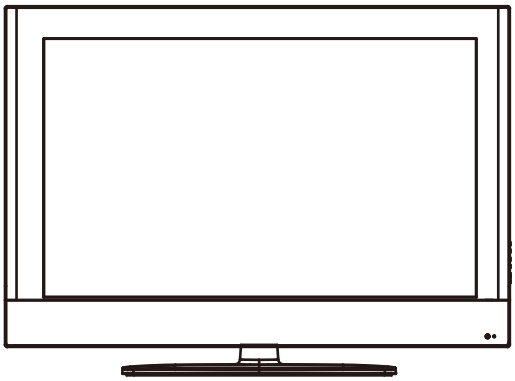

TV set

Remote control
Batteries: 2xAAA

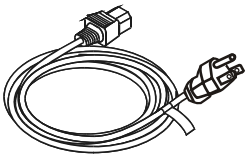

Power Cord



Wi Fi USB Adapter

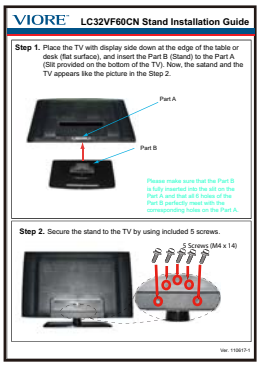
VIORE LC32VF60CN Stand Installation Guide
Step 1. Place the TV with display side down at the edge of the table or desk (flat surface), and insert the Part B (Stand) to the Part A (Slit provided on the bottom of the TV). Now, the satand and the TV appears like the picture in the Step 2.
Part A
Part B
Step 2. Secure the stand to the TV by using included 5 screws.
5 Screws (M4 x 14)

Stand Installation Guide

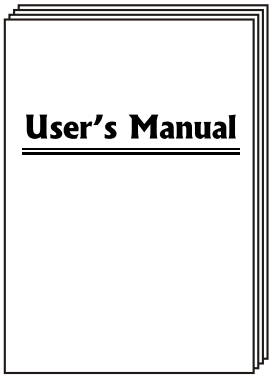

User's manual

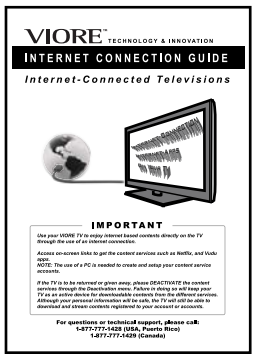

Internet
Connection Guide

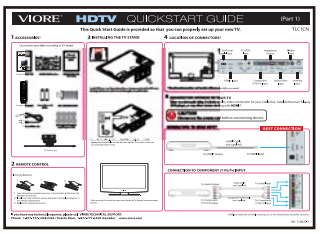

Quick Start Guide

Product Feature

- 32 ” (measured diagonally) wide screen for a complete home theater experience
- 1920 x 1080 native resolution for Full-HD (1080p) performance
- Integrated ATSC TV tuner for HDTV broadcast reception
- Three HDMI® inputs for true digital connections
- VGA port for connection to PC
- Connection: RJ45, USB, HDMIx3, PC, PC audio, Coax, YPbPr, Video, Audio L/R, RF, Headphone

HDMI is a trademark of HDMI Licensing LLC in the United States and other countries.

Introduction

1. Front View

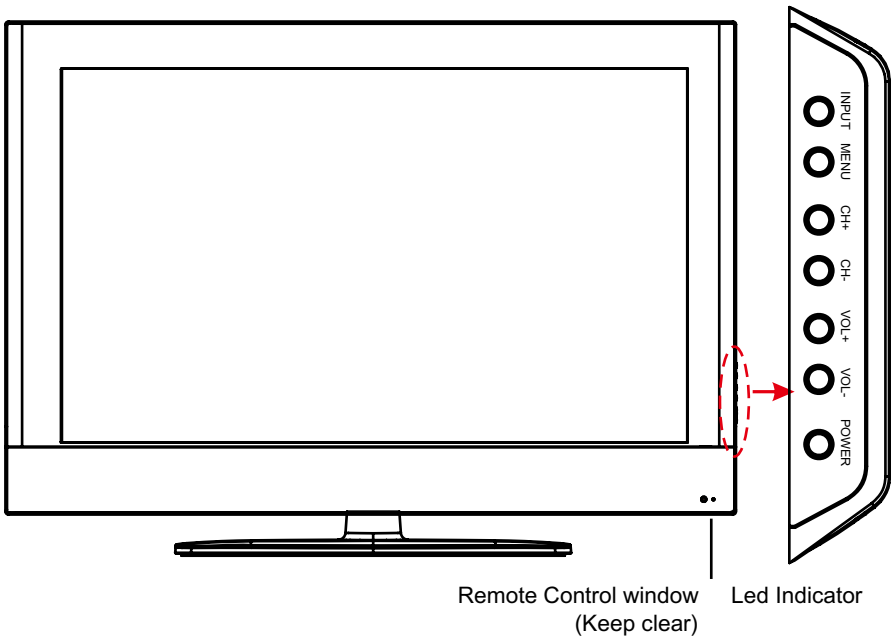

1). (IR) Infrared Receiver: Receives IR signals from the remote control.
(Power on/Standby)LED Indicator: Press **POWER** to turn on and off.

Indicator on(Red)	Standby mode
Indicator on(Green)	Power on mode

The effective receiving range for the signal is 5-8 metres from the front of the remote control window, and 30^0 to the left or right side and 20^0 above or below the remote control window.

2). The functions of the buttons:
INPUT: Press to display the input source menu.
MENU: Press to display the OSD menu,
press again to exit the menu.
CH+/-: Press to scan through channels.
VOL+/-: Press to adjust the volume.
POWER: Turn on/standby the TV set.

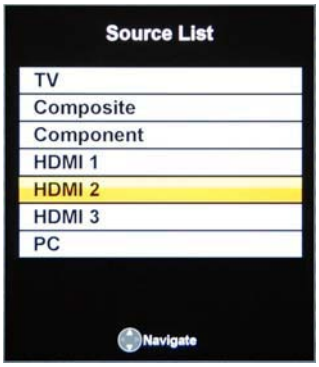

Press **INPUT** button on the TV set or the **SOURCE** button on the remote control to display the input source menu, and use **CH+/-** button on the TV set or ∧ / ∨ button on remote control to select the input source, press **OK** button on the remote control to enter.
Note: Before you select the input source, make sure the connections are prepared.

2. Rear View

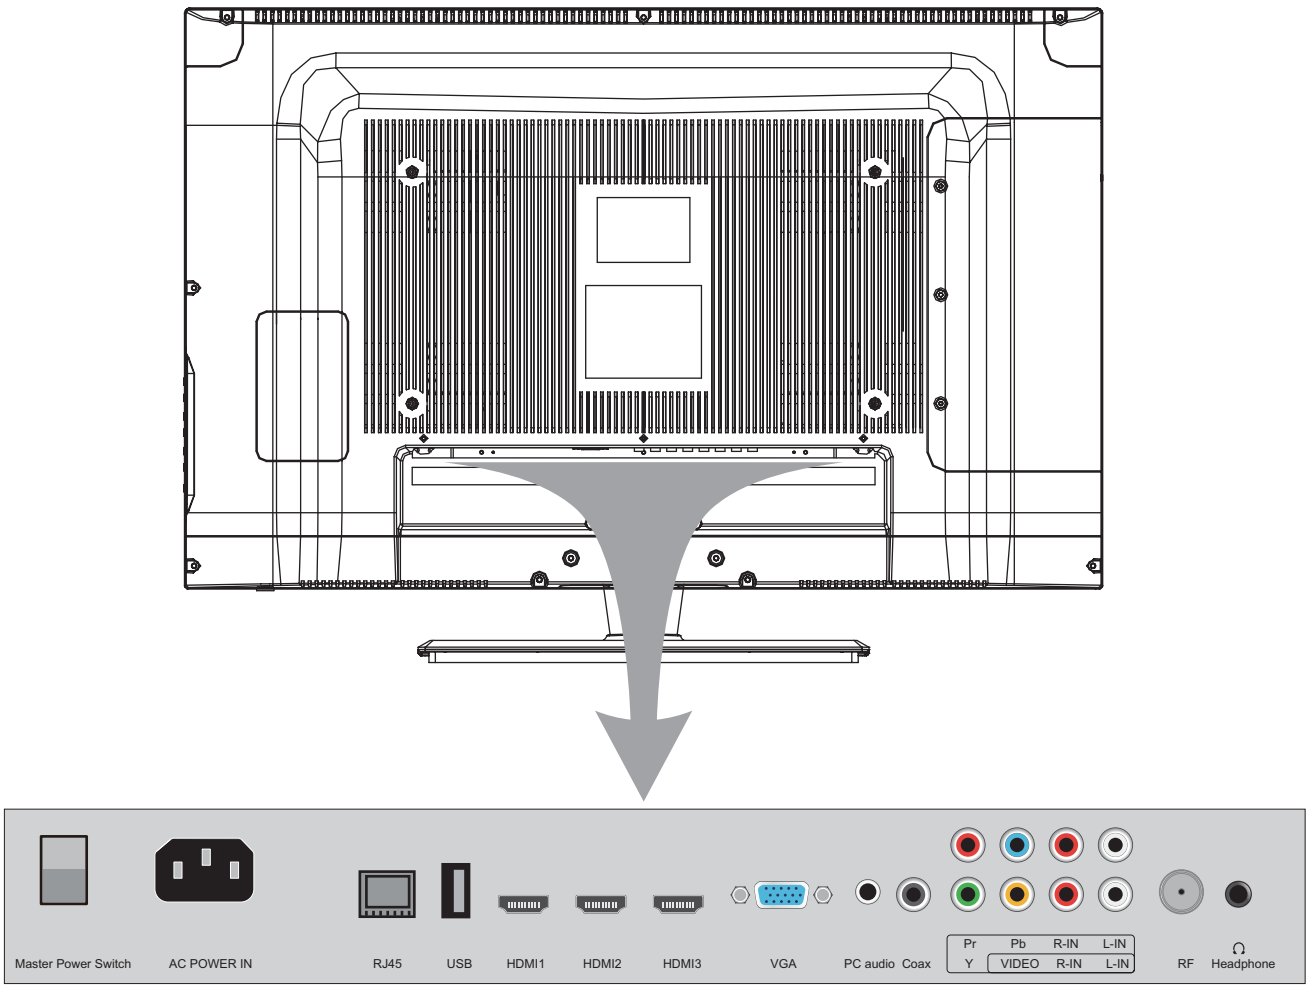

Master Power Switch: Switch on or off the power supply.

AC POWER IN: Connect to an earth 100-240V~ 50/60Hz outlet by using the supplied power cable..

RJ45 : Connect to the network.

USB : For service, Multimedia and Wireless network.

HDMI1/2/3 : Connect it to the HDMI output of the external device.

VGA : For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

PC AUDIO IN : Connect it to the audio output terminal of PC.

COAX : Digital Audio Output.

YPbPr: Connect them to the video output terminal of the external device.

L/R in : Connect them to audio output terminal of the external device. (YPbPr)

VIDEO: Connect it to video output terminal of the external device.

L/R in : Connect them to audio output terminal of the external device. (Video)

RF: Connect antenna or cable 75 Ohm coaxial to receive TV signal.

Headphone : Connect it to your headphone or other audio equipments.

Note: If TV network system has problem, you can use Master Power Switch to reset.

3. Instruction for Wall Mount

The wall mount kit (not included) with your purchase allows you to mount your VIORE TV on the wall. For detailed information on installing the wall mount, refer to the instructions provided by the wall mount manufacturer. It is strongly recommended to contact a technician for professional assistance for wall mount installation. VIORE is not responsible for any damage to the product or injury to yourself or others resulting from the wall-mounting.

Dimensions for Mounting Hole Pattern

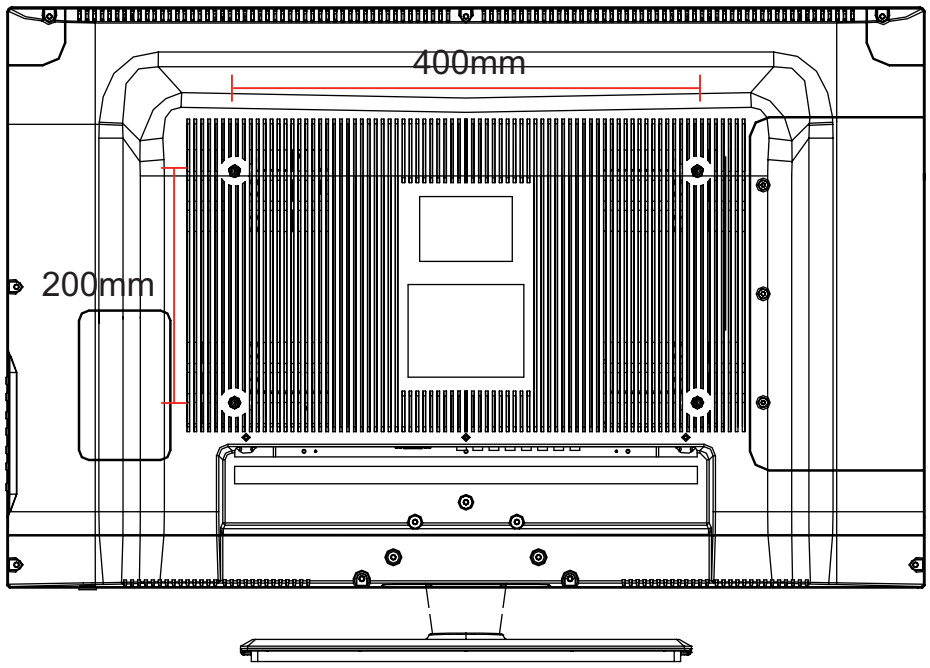

- This VIORE TV is compatible with a 400mm x 200mm mounting hole pattern.
- 4 pcs of type M4 screws are required for installing the wall mount bracket to your VIORE TV. Do not use screws that are longer than 10 mm. Screws that are too long may cause damage to the inside of the TV set.
- Do not fasten the screws too tight for this may damage the TV or cause the TV to fall, resulting in personal injury. VIORE is not liable for these kinds of incidents
- Do not mount your VIORE TV at more than a 15 degree tilt.
- Always use two people to mount the TV to a wall.
- Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

The remote control is using Infra-Red(IR). Point it towards the front of the LCD TV. The remote control may not work correctly if it is operated out of range or out of angle.

1 **POWER**(red button): Turn the TV on/standby.
SOURCE: Press to display the input source menu.

2 **Number Buttons:** Choose channel directly.
Select channel 5, Press button "5";
Select channel 62, Press button "6", then press button "2";
Select channel 121, Press button "1", and press button "2" in 2 seconds, and press button "1";
Select channel 5-1, Press button "5", and press button "- / - -" in 2 seconds, and press button "1" in 2 seconds;
(RETURN): Return to the previous channel viewed.
SLEEP : Shutdown timer.
FAV: Press to add or remove favorite channel.
EPG: Press to enter the EPG menu directly.

3 **VOL+/-:** Press to adjust the volume.
CH+/-: Press to scan through channels.
MUTE: Press to mute the sound, press again or press VOL+ to unmute.
DISPLAY: Display the information of current mode.

4 **VUDU:** Press to enter the VUDU Movie App.
HOME : Press to enter the home page of the selected Apps.
NETFLIX: Press to enter the Netflix Apps.
NETWORK: Press to enter the internet Apps.
RETURN : Return to the previous menu.
Thumbstick(< > ∧∨) Allows you to navigate the on-screen menus and adjust the system settings to your preference.
OK: CONFIRM button.
MENU: Press to display the OSD menu.
EXIT: Press to exit the OSD menu.
Colour buttons: Some menus require the use of these buttons. The functions of the buttons are designated in the menus.

5 **MEDIA:** Press to enter the USB menu.
PICTURE: Press to display the menu for selecting video picture mode.
SOUND: Press to display the menu for selecting sound mode.
ASPECT: Change the screen display mode.
CC: Press to display the closed caption.
MTS: Press to select the audio channels.
⏯: Play/pause program.
■ : Stop programs.
⏪ ⏩ : Fast reverse/forward programs(Except in USB mode).
⏮ ⏭ : Previous/next chapter programs.

Installing Batteries

1. Open the battery compartment cover on the back of the remote control.
2. Insert two 1.5V AAA size batteries observing the polarity markings inside the battery compartment. Don't mix different types or used batteries with new ones.
3. Close the cover.

Batteries shall not be exposed to excessive heat such as sunshine or fire.

- The remote control should be operated within 30 feet(7m) and 30^0 to the left and right of the IR receive at the front of the TV.
- Used batteries should be disposed properly.

Power on/off

1. Connect to the power supply with the power cord, and turn on the switch.
2. -To turn on the TV
   Press **POWER** button on the TV or remote control.
   -To turn off the TV
   Press **POWER** button on the TV or remote control.

Input Source select

Press **INPUT/SOURCE** button on the TV set or remote control to display input source menu, and use **CH+/-** button on the TV set or ∧/∨ button on remote control to select the input source, press **OK** button on the remote control to enter.

Note: Before you select the input source, make sure the connections are prepared.

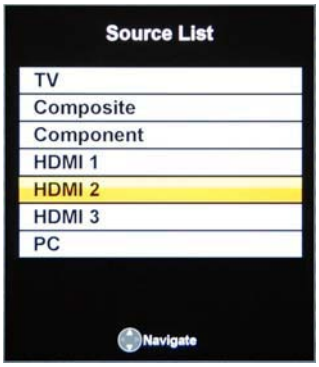

Basic OSD Menu operation

Press **MENU** button to display the OSD menu as below:

Main menu
Picture
Sound
Enterainment
Channels
Locks
Setup

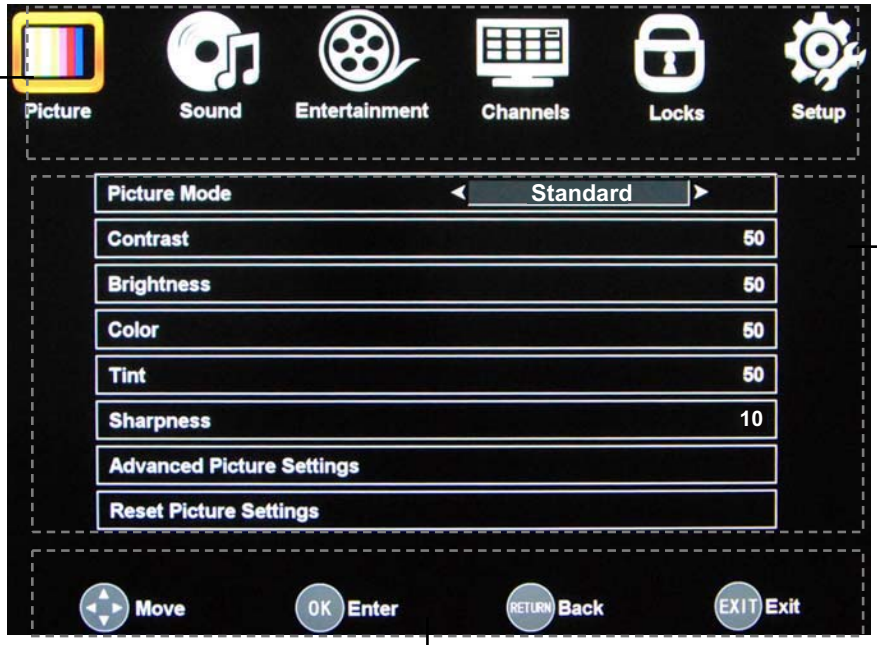

Submenu
(Video menu for example)

Hint---you should operate the OSD menu according to the hint.

Use < / > button to select the main menu, and press ∨ button to enter the submenu.
In the submenu, use ∧ / ∨ button to select the function item, press < / > button to select, or press **OK** button to enter the option menu.

* (Press **MENU/RETURN** button to return to the upper menu.)
* (Press **EXIT** button to exit the menu display.)

Note1: Only when you input the suitable signal or on the suitable mode, the relevant items can be activated

Note2: Please operating the OSD menu according to hint on the bottom of the banner.

1. Picture menu

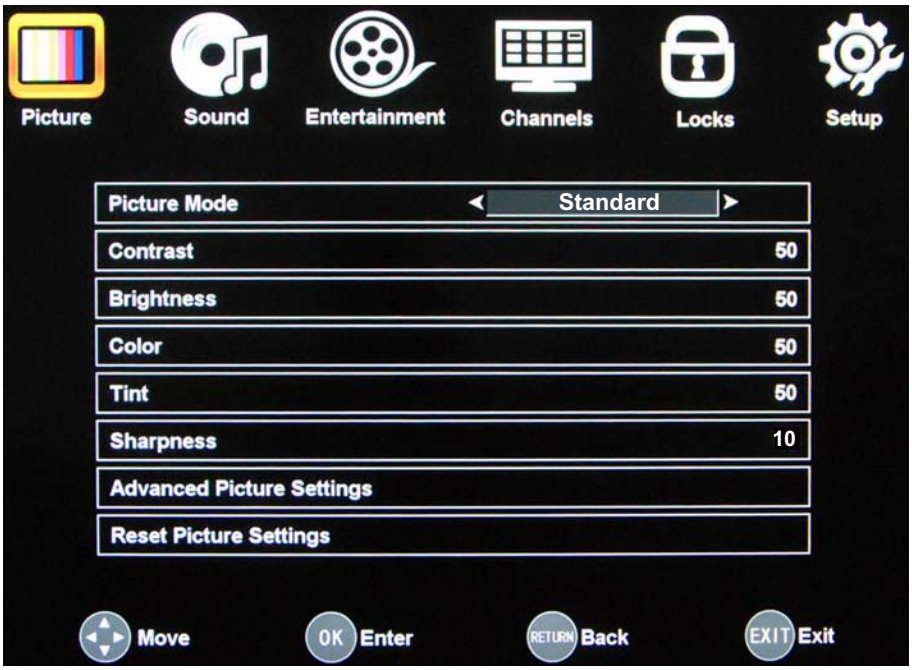

Description

Picture Mode: Select your desired picture mode.
You may select the picture mode directly by pressing the **PICTURE** button on the remote control.

Note 1: the values of the Contrast, Brightness, Color, Tint and Sharpness are Unchanged in Standard, Movie, Sport, Energy Saving picture mode.

Note 2: when select the "Energy Saving", the machine is in energy-saving status.

Contrast: Adjust image contrast.
Brightness: Adjust image brightness.
Color: Adjust image color.
Tint: Adjust the tint of the picture (in NTSC mode).
Sharpness: Adjust the sharpness.

Advanced Picture Settings:

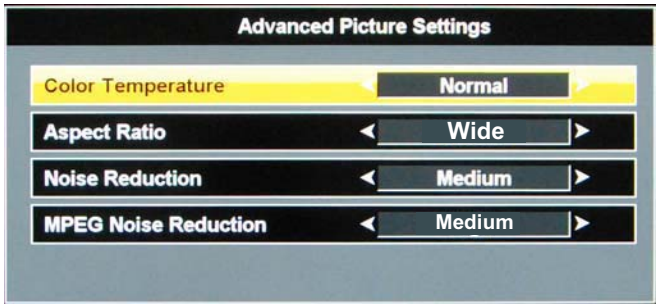

Color Temperature:
Select your desired color temperature mode.
Aspect Ratio:
Select your desired aspect ratio for the screen.
Note: When you connect the PC with the HDMI cable, Suggested to use Dot by Dot aspect mode.
Noise Reduction:
Select the option to reduce the video noise level between Off, Low, Medium and High.
MPEG Noise Reduction:
Select the option to reduce the MPEG video noise level between Off, Low, Medium and High.

Reset Picture Settings: Reset all the picture settings to factory default.

2. Sound menu

Description

Sound Mode: Select your desired sound mode.
You may select the sound mode directly by pressing the **SOUND** button on the remote control.

Note: the values of the Bass, Treble and Balance are Unchanged in Standard, Music, Movie, and News sound mode.

Bass: Adjust the level of the lower-pitched sounds.
Treble: Adjust the level of the higher-pitched sounds.
Balance: Adjust the audio output between left and right speakers.

Advanced Sound Settings:

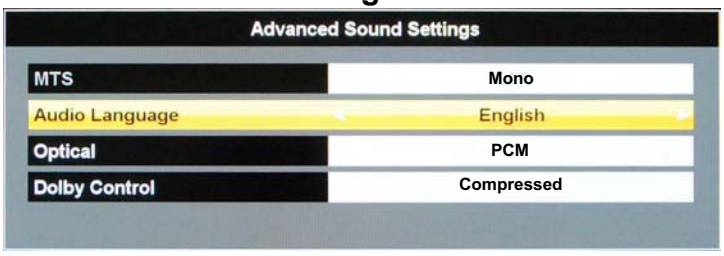

MTS:
Select the audio mode for ATV from Mono, Stereo, SAP.

Audio Language:
Select the audio mode for DTV from English, French, Spainish.

Optical:
Select the optical mode from Dolby, PCM.

Dolby Control:
Select the dolby control from Compressed, Standard.

Reset Sound Settings: Reset all the sound settings to factory default.

3. Entertainment menu

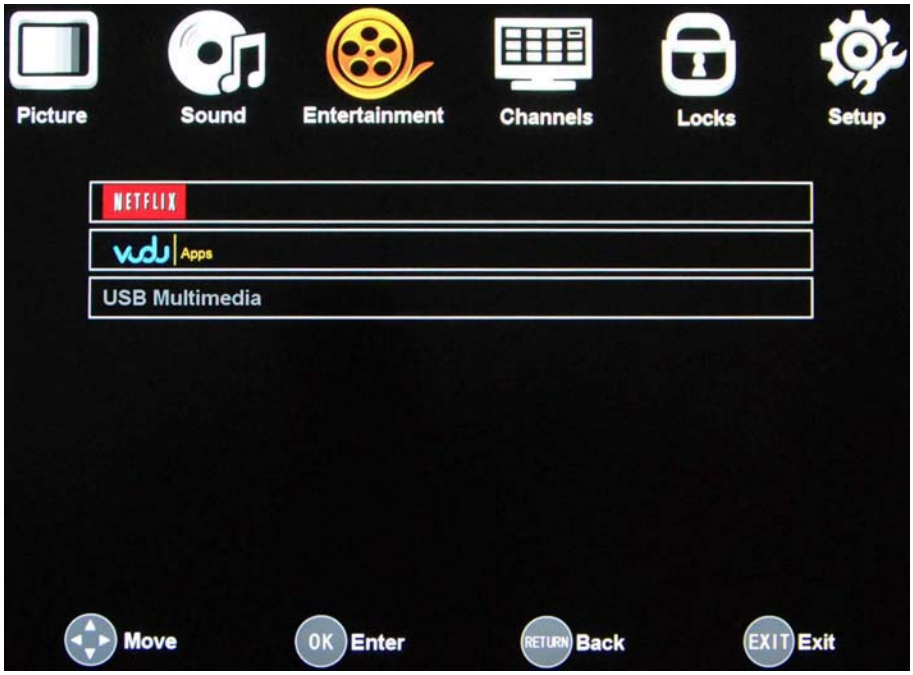

Description

NETFLIX: Enter the Netflix Apps.

VUDU: Enter the Vudu Apps.

USB Multimedia: Enter the USB multimedia menu when there's USB device connected.

Note: You can not enter the menu when there's no network connected or no USB device connected.

Netfilx, Vudu and Media operation

Use the Vudu and Netflix buttons to enter the Vudu and Netflix applications. Before using these buttons, make sure your TV has a stable internet connection. Please refer to the included Internet Connection Guide booklet for details about Netflix and Vudu.

Use the Media button to enter the USB media application. Before using the Media button, make sure a USB media device is plugged into the USB port

4. Channels

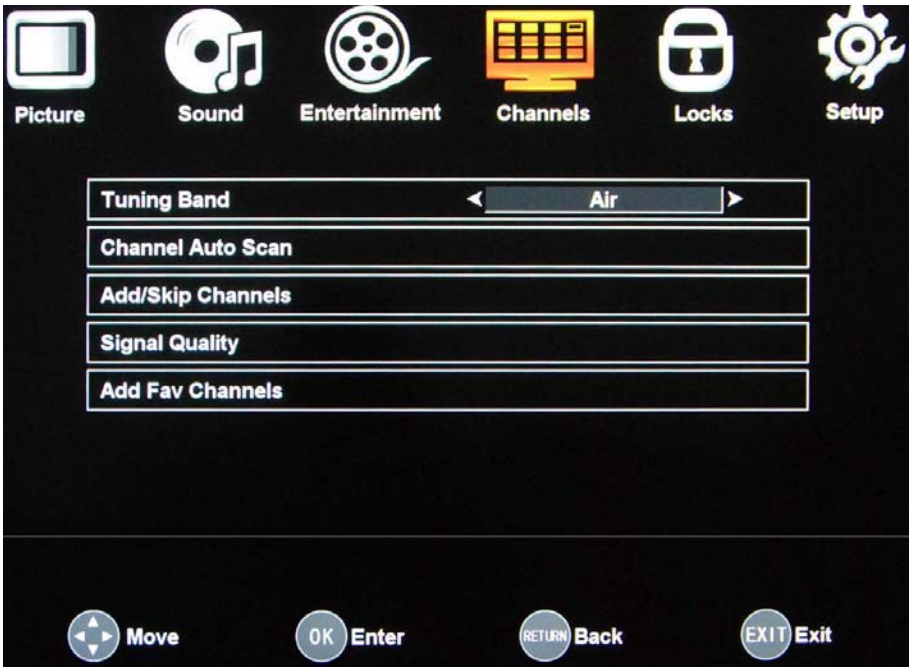

Description

Tuning Band: Allow you to select antenna between Air and Cable.
Channel Auto Scan: Enter the Channel Auto Scan menu to start auto scan.

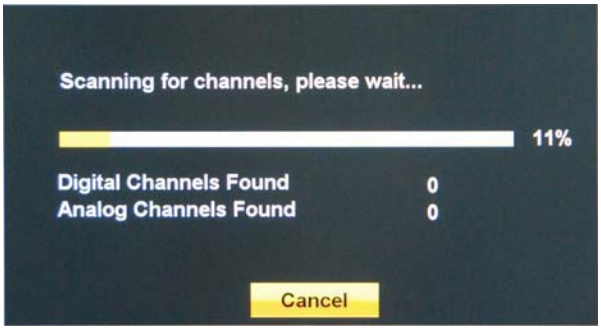

The receivable channels will be stored automatically.

When searching channels, press OK to stop and exit.

It will take a while to auto scan DTV and ATV channels, please wait patiently.

Add/Skip Channels: Enter the Add/Skip Channels menu to edit the channels.

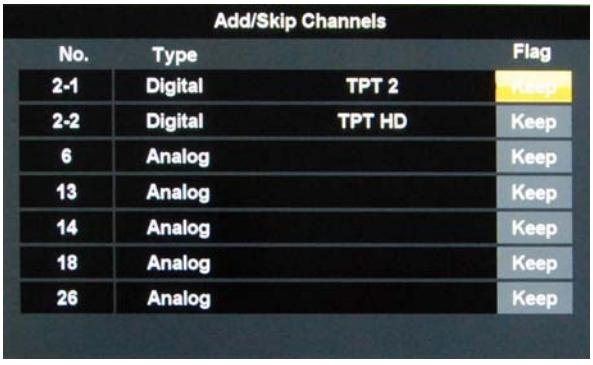

Select the channel by ∧ /∨ button, and press OK button to add(Keep) or skip(Skip) the channel.

If the channel is skipped ,the channel will not be programed when you scan the channels by CH+/- button.

Signal Quality: Display the current channel's signal quality.

Favorite Channels Setting: Enter the Favorite Channels Setting menu to edit the channels.

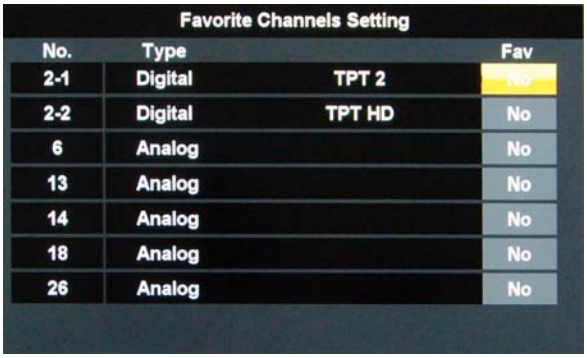

Select the channel by ∧ /∨ button, and press OK button to add(Yes) the channel to the favorite channel list or delete(No) it.

You could press the FAV button on the remote control to display the favorite channel list.

5. Lock menu

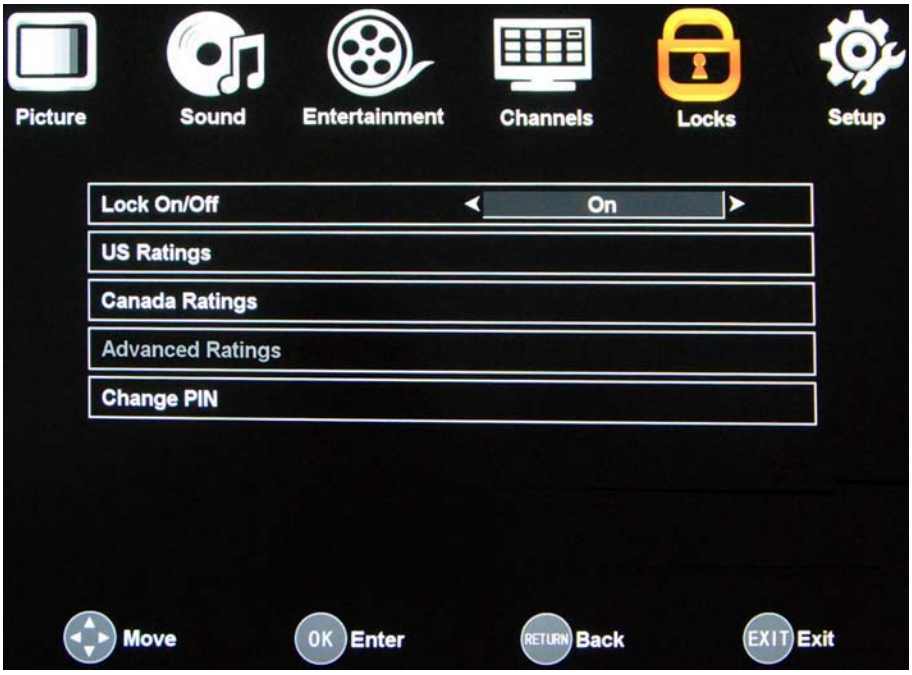

Description

You must enter the password to gain access to the Lock menu. The default password is 0000.

Lock On/Off: Allow you to turn on or off the system lock. If deactivated, the functions described below don't work.

This option menu allows you to lock any TV channel or adjust the Movie rating filter.

US Ratings: V-Chip settings for USA.

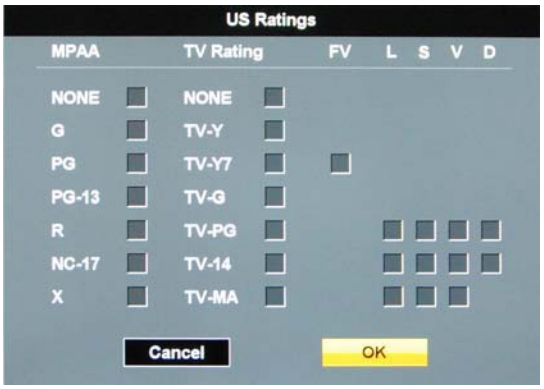

Use < > ∧ ∨ buttons to select, and press OK buttons to confirm.
Select OK item to store and exit, Select Cancel item to exit without storing the settings.

G: General Audiences. Movie is appropriate for all ages.
PG: Parental Guideance Suggested. May contain material not suited for younger viewers.
PG-13: Contains content that may not be appropriate for viewers under the age of 13.
R: Restricted. Contains adult content, no one under 17 admitted without parent.
NC-17: No one 17 and under admintted.
X: Adults only.

Canada Ratings: V-Chip settings for Canada.

Use < > ∧ ∨ buttons to select, and press OK buttons to confirm.
Select OK item to store and exit, Select Cancel item to exit without storing the settings.

Advanced Ratings:

Use ∧∨<> buttons to select, and press OK buttons to confirm.
Select OK item to store and exit, Select Cancel item to exit without storing the settings.

Change PIN: Change the password, you must enter the new password twice to confirm it.
Note: Do not forget the password.

6. Setup menu

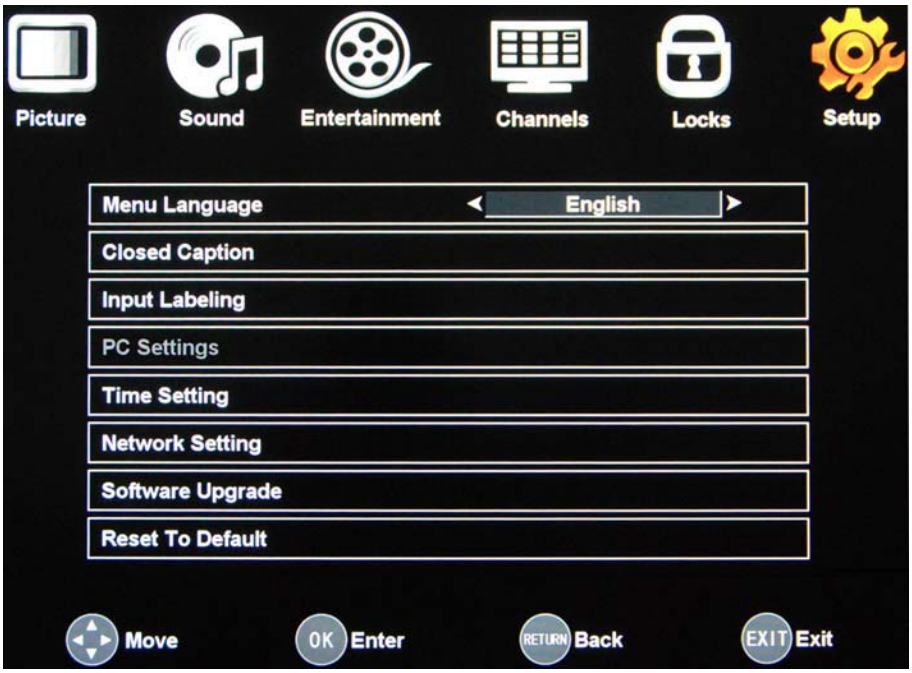

Description

Menu Language: Select OSD menu language.

Closed Caption:

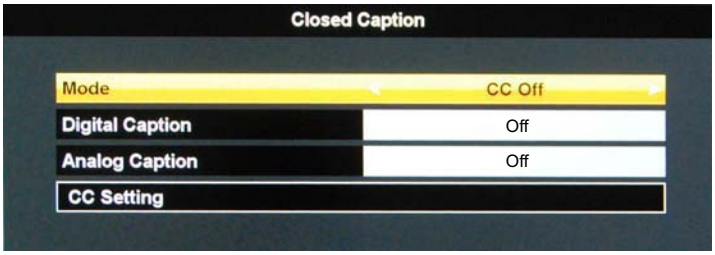

Mode: Allow you to select the CC Mode among: CC On, CC Off and CC on Mute.
Digital Caption: Allow you to select the digital caption among: off, Service1, Service2, Service3 Service4, Service 5 and Service 6.
Analog Caption: Allow you to select the analog caption among: off, CC1, CC2, CC3, CC4, T1, T2, T3 and T4.
CC Settings: Setup the Details Closed Caption settings.

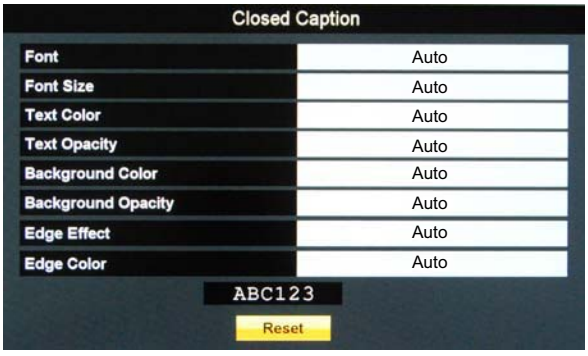

Use < > ∧ ∨ buttons to operating in option menu as your desire.

Input Labeling:

Use ∧∨<> buttons to select, and press OK buttons to confirm.
Select OK item to store and exit, Select Reset item to reset the settings.

PC Setting: If the video input signal comes from your PC, you may adjust the Vertical Position, Horizontal Position, Clock Phase, Sampling Clock or even perform an Auto adjust.

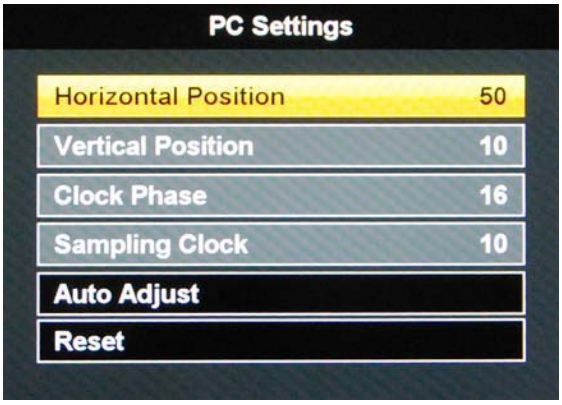

Time Setting: Enter the Time Setting menu to setup the Auto Daylight and Time Zone.

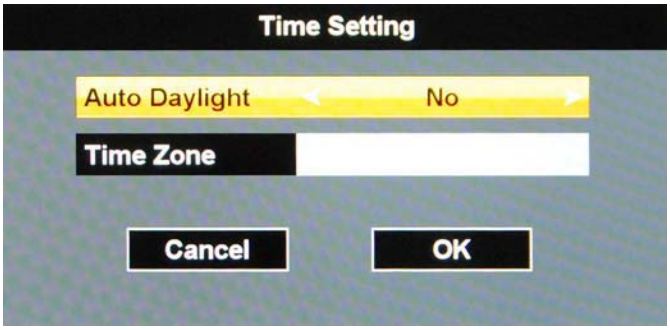

Select OK item to store and exit, Select Cancel item to exit without storing the settings.

Network Settings: Enter the Network Setting menu to setup the network for TV.
(Please see the CTV Guide for detail)

Software Upgrade: Update the software (See next page).

Reset to Default: Reset all the settings to factory default.

7. Software Upgrade

Software Upgrade via Internet: You can update your TV by downloading and installing the newer version software via internet.

Note: 1. Your TV detects the availability of the newer version software via internet.
2. If the newer version software is not available, upgrading is NOT necessary.
3. Before starting, make sure that you have a stable wired or wireless internet connection.
4. DO NOT turn the power off during this upgrade process.
5. After upgrading the software, the TV will be reset to the factory default setting and you will need to go through the initial setting.

① When your TV detects the newer version software via internet, it displays the menu shown in the right to ask you if you want to update the software.

② Select YES by using ＜/＞ buttons, and press OK button on the remote control. The TV displays the caution menu shown in the right.

③ Select YES by using ＜/＞ buttons, and press OK button on the remote control to start downloading the software. The TV displays the progress menu shown in the right.

Note: Do not power off the TV when it is processing.

④ The TV will upgrade the Firmware and Linux Application automatically when the download is completed.

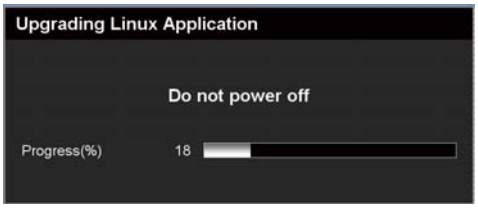

⑤ Upon completion of upgrading, the TV displays "Successful" on the menu shown in the right. Then you need to turn the power off and on (restart) by using the power switch on the remote control or on the TV.

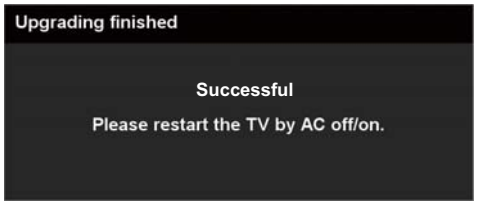

If the menu for upgrading is not displayed or upgrading failed during the process, you can try the following procedure.

(A) Check your internet connection. Make sure that you have a stable internet connection.

(B) Press MENU button on the remote control to display the OSD menu shown in the right. Select "Software Upgrade" and press OK button. The TV displays the following Software Upgrade menu.

(C) Press OK button to test the internet connection.

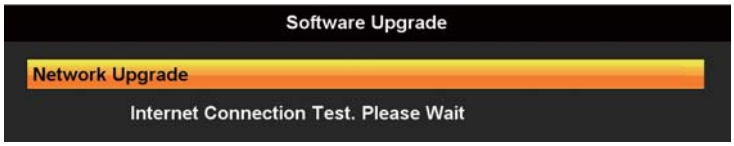

(D) Your TV will automatically search and detect the newer version software via internet.

(E) Follow the above described steps 1 ~ 5 to upgrade the software.

8. USB menu

1). Insert the USB device.

2). Press **MEDIA** button on the remote control. The TV will search and detect the device automatically, and display the menu as shown below.

Note: You can also enter the menu by selecting "USB Multimedia" in the Entertaiment menu.

Note: The TV will display the USB menu automatically when you insert the device.

Buttons for playing the music:

RETURN: Return to the upper menu.

▶/Ⅱ: Play or pause.

■ : Stop.

⏮ : Previous chapter.

⏭ : Next chapter.

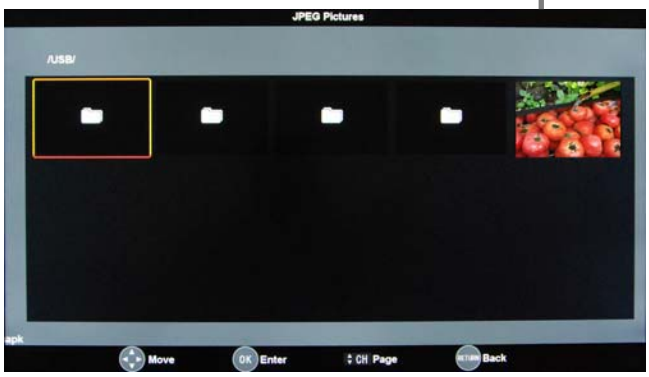

Select the picture and press OK button to view it in full screen.

Buttons for controling the pictures:

OK: Switch between Slide mode and Single mode.

< > : Display the previous/next picture.

∧ ∨ : Rotate the picture.

RETURN: Return to the upper menu.

BLUE button: Turn on the MP3 songs menu to play the music file.

Simple Troubleshooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions.Remember to check the peripherals topinpiont the source of the failure.
If the display still fails to perform as expected,connect your helpline for assistance.

No power
- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.
- Make sure the Master power button is on.

No picture or sound
- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different channel.

Poor picture quality
- Check the aerial connections.
- Check that the channel is tuned properly.
- Adjust the picture settings:brightness,colour,sharpness,contrast,hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

No colour
- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the cannel is tuned properly.

TV does not respond to remote control
- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control and not weak or exhausted.

This LCD TV is for household use and registered as harmless on electromagnetic waves. Therefor,you can use it in every location as well as residential areas.

Technical Specifications

LCD Panel	Panel Size	32 inch (diagonal)
	Brightness	450 cd/m^2
	Dynamic Contrast	10000:1
	Resolution	1920x1080
Input Connector	Video	1
	Audio(L/R)	2
	VGA	1
	PC Audio	1
	HDMI	3
	YPbPr	1
	RF	1
	RJ45	1
	USB	1
Output Connector	Headphone	1
	COAX	1
Power Source		100-240V~ 50/60Hz
Max Power consuption		140W

* Product specifications and appearance are subject to change without notice.

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

VIORE™ LIMITED WARRANTY

FLAT PANEL TELEVISION

This **VIORE** brand Product, as supplied and distributed by **VIORE** and delivered new in the original carton to the original purchaser is warranted by **VIORE** against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year on parts and labor. However, there will be only a 90 day parts and labor limited warranty for commercial use.

This Limited Warranty does not apply to store display products and product sold as a “marked down” special, in “as is” condition, “close outs”, “liquidation and clearance sales”, "open box", products missing accessories, no fault found or damaged at time of delivery to **Viore**.

Proof of purchase within one year from date of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase, and is valid only on Products purchased through **VIORE** authorized dealers and used in the United States, Canada, and Puerto Rico by the original purchaser. To receive warranty service, the purchaser must contact **VIORE** for problem determination and service procedures. Warranty service may only be performed by a duly authorized **VIORE** service center. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase to **VIORE** or **VIORE's** authorized service center.

VIORE will repair or if repairs cannot be made, **VIORE** will replace this Product at no charge with the same, like or similar Product if the Product is defective as specified in this limited warranty during the limited warranty period. **VIORE** may use new or remanufactured parts or products to repair or replace the Product at its sole discretion. All replaced parts and Products become the property of **VIORE** and must be returned to **VIORE**. Replacement parts and Products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight needs to be prepaid by original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. **VIORE** shall not be responsible for or obligated to replace damaged goods.

If the product is received damaged by **VIORE**, it is the responsibility of the consumer to file a claim against the carrier. **VIORE** will only store the damaged product for 30 days and reserves the right, in its sole discretion, to dispose of the damaged product or ship it back to the consumer at consumer’s expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by **VIORE** which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. **VIORE** does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON VIORE. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VIORE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTIBILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact **VIORE** at:

Phone: 1-877-777-1428 (USA / Puerto Rico)

1-877-777-1429

www.viore.com

Ver. 101122-1 Printed in China

VIORE, Inc. 7801 Hayvenhurst Avenue, Van Nuys, California 91406 Printed in China